



Remote Control Beacon (PL-300xJ-RC)

Instructions for use and Troubleshooting



A Inserting Batteries

- 1 Rotate colored beacon shell counterclockwise from base to open.
- 2 Needs AA battery (There are six battery ports but only 4 batteries are needed).
- 3 Insert batteries as indicated by polarity direction.
- 4 Replace colored beacon shell to base by turning clockwise.

B To Operate Beacon

- 1 Push red button on bottom of beacon to turn on.
- 2 Once turned on the remote then will be able to operate the beacon by turning it off an on.

C To adjust the speed of the rotation

- 1 Rotate Colored Beacon shell counterclockwise from base to open.
- 2 Remove battery compartment from the center of the lights.
- 3 With a philips screw driver rotate the white screw seen in the center compartment.
 - a Clockwise: faster
 - b Counterclockwise: Slower
- 4 Replace colored beacon shell to base by turning clockwise.

D Other Features

- 1 There are two magnets on bottom of base so that the unit will adhere to metal.

D Troubleshooting

- 1 Make sure Batteries are installed properly in the product and in the remote.
- 2 Make sure batteries are not dead.
- 3 Sometimes rolling the batteries inside the battery compartment helps the batteries to make better contact or give a little twist to the battery compartment.
- 4 Whenever you change the batteries you will need to be sure and push the red button on the bottom of the beacon to turn it on again. Then the remote will work with the unit.